



User Manual
vG-BLcylinder 4




Smart your life!


Version 1.0 Edition S1K

1 Packing Accessories

Please check the packing box and accessories when you got the item in hand.

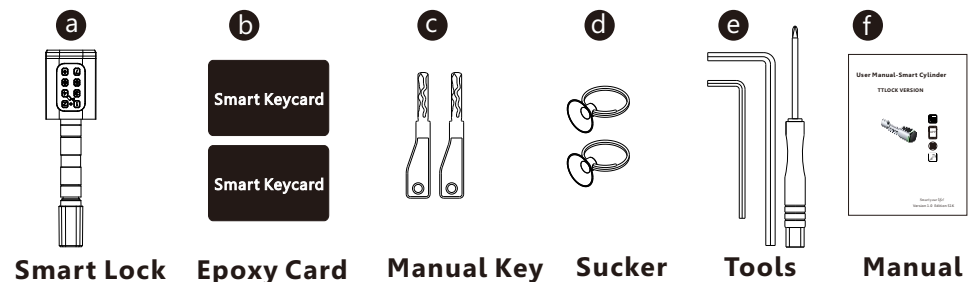


2 Product Specification

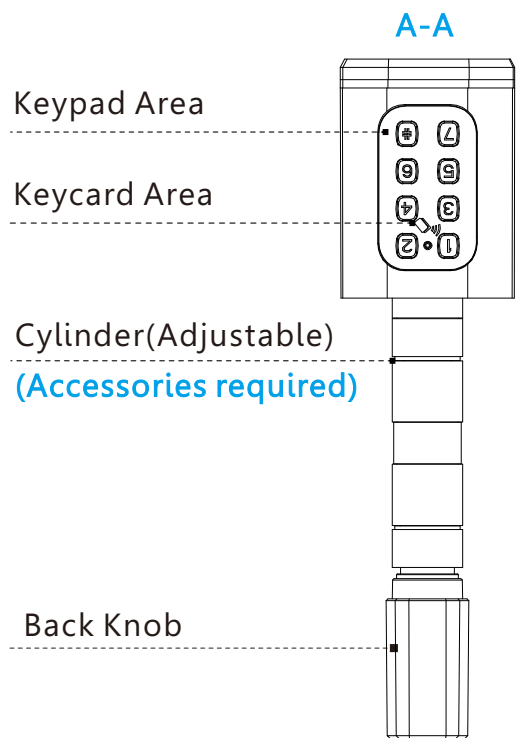


1

3 Reader View

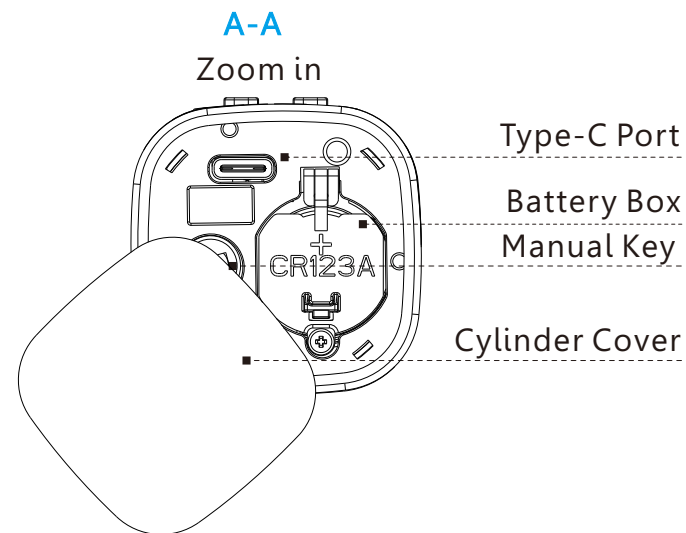


4 Dimension

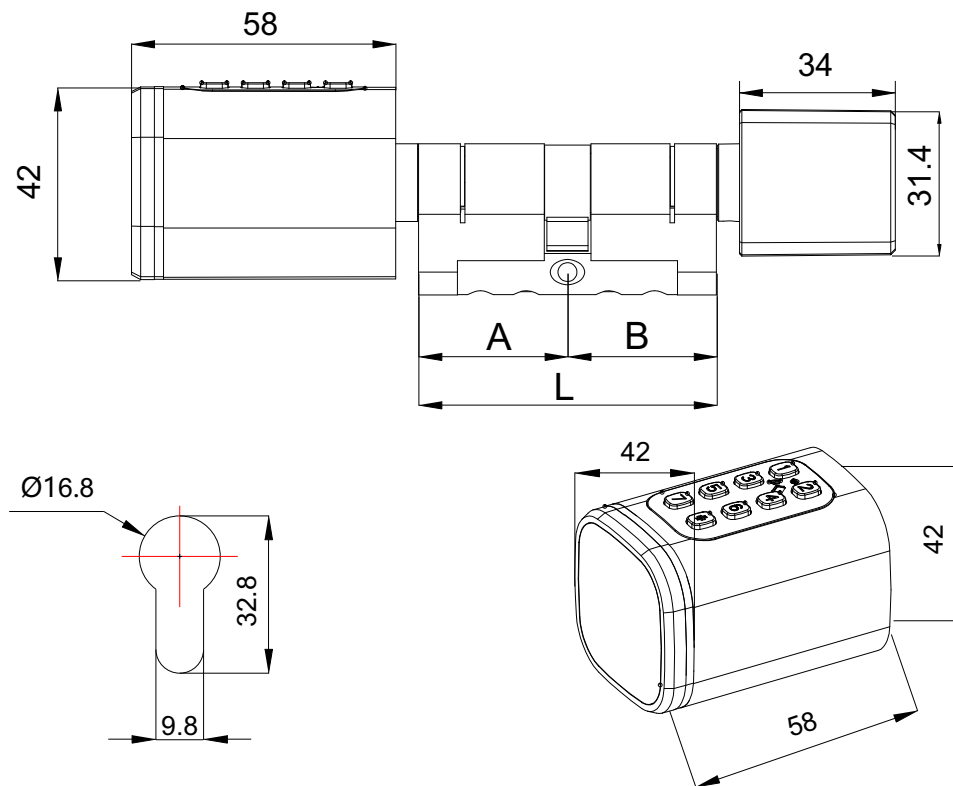

2

5 INSTALLATION STEPS


5.1 Please use the screw driver to take off the screw on the back knob position, refer the below Pic.1:

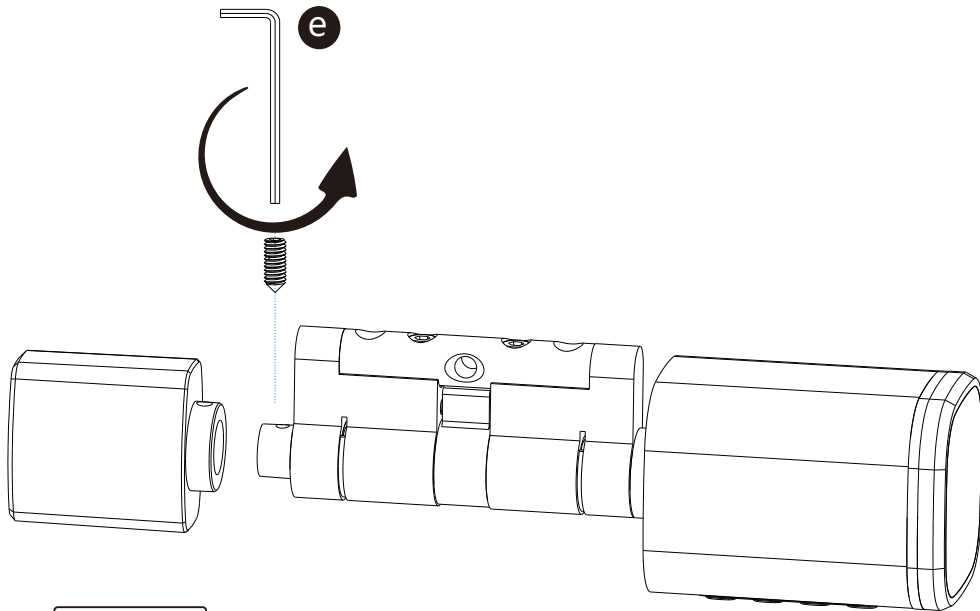

⚠ Attention


Special Notice for Axis Door:

You can use the screw driver to take off the screw on the back knob position and adjust the tail size accordingly, refer the below:

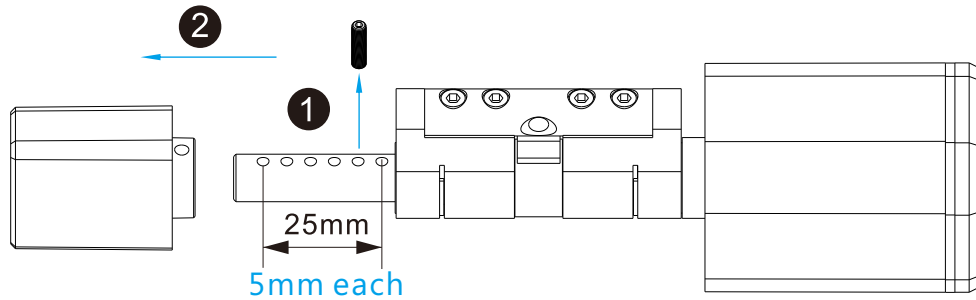


Pic.1

5.2 Please insert the cylinder to the existed lock and fix the cylinder with the long screw as picture 2.

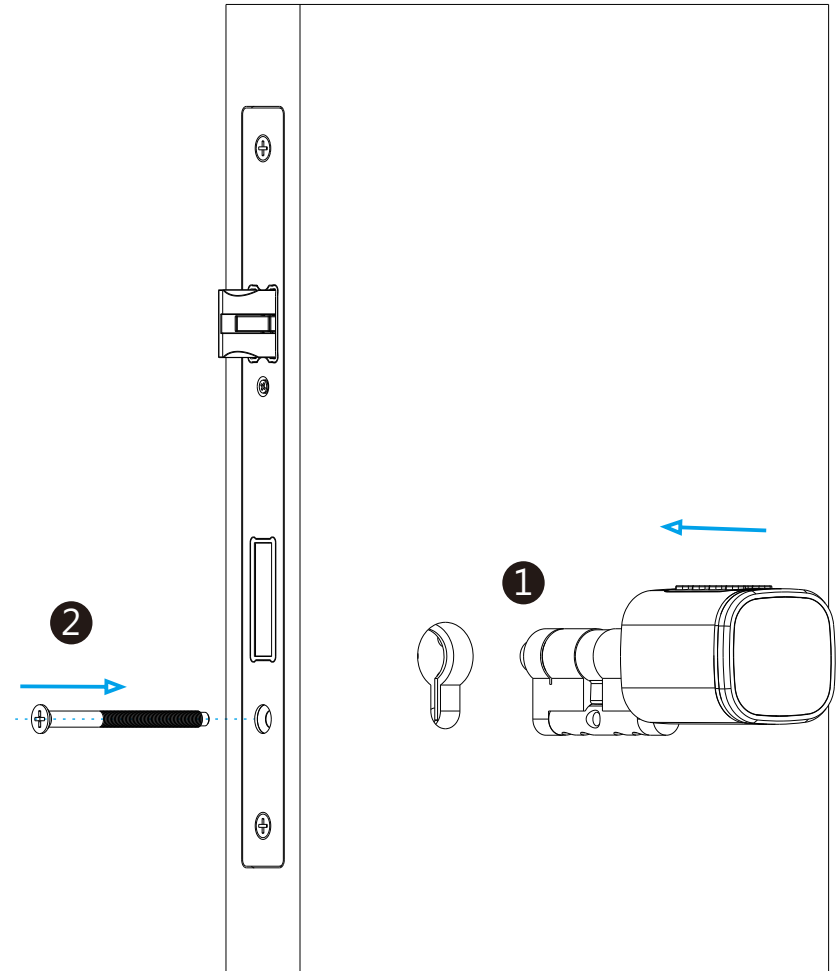



Pic.2

5.3 Please use the screw driver to fasten the screw on the back knob position, refer the below picture 3:

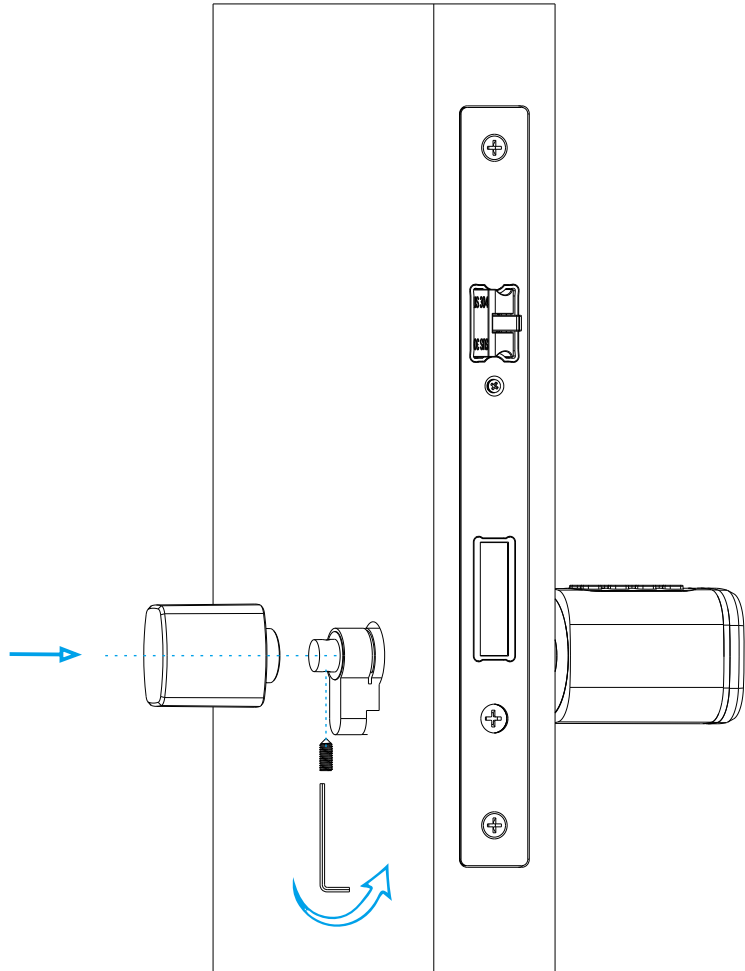

Pic.3


5.4 Please take off the reader cover with the magnet or sucker (included in our accessories bag), assemble 1xCR123A alkaline battery, refer the below picture 4:

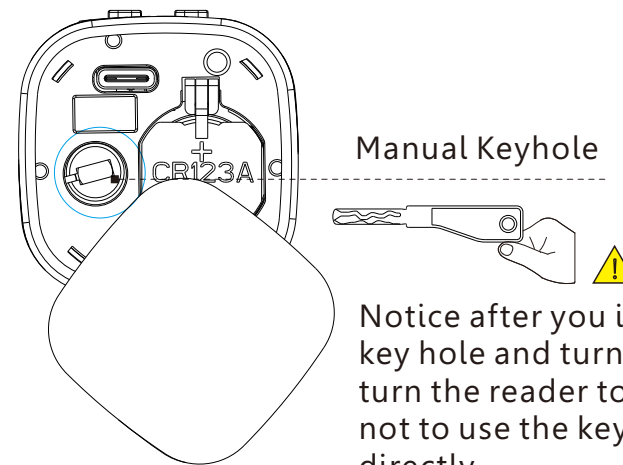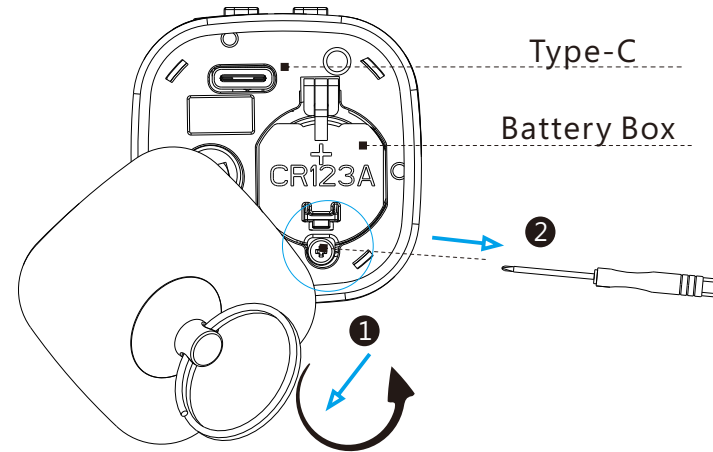

Notice after you insert the key into the key hole and turn clockwise, you shall turn the reader to unlock the door but not to use the key to unlock the door directly.


Pic.4

5.5 Please test with your default password 123456 and end with "# " under the factory state, refer the below picture 5:

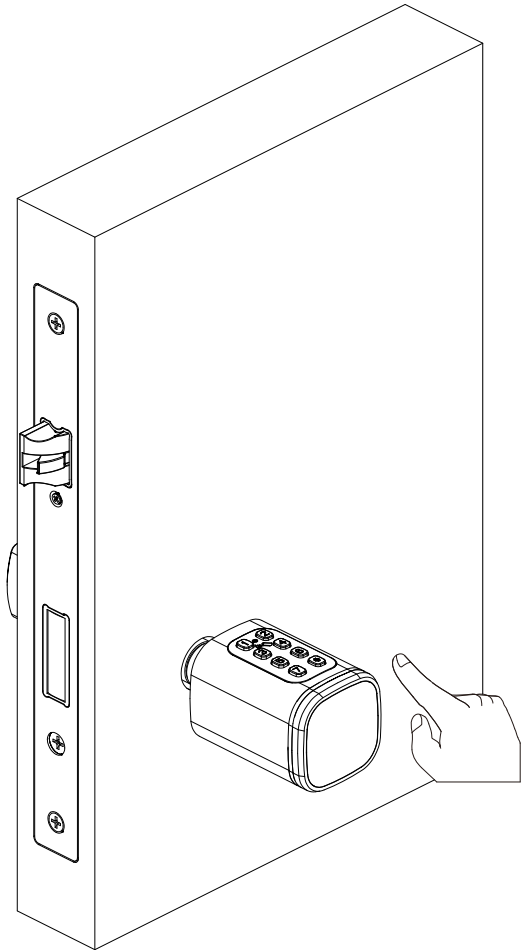


Pic.5

5.6 Please test the lock with key card after you configure the lock with TTLOCK APP(Refer the Part 6).

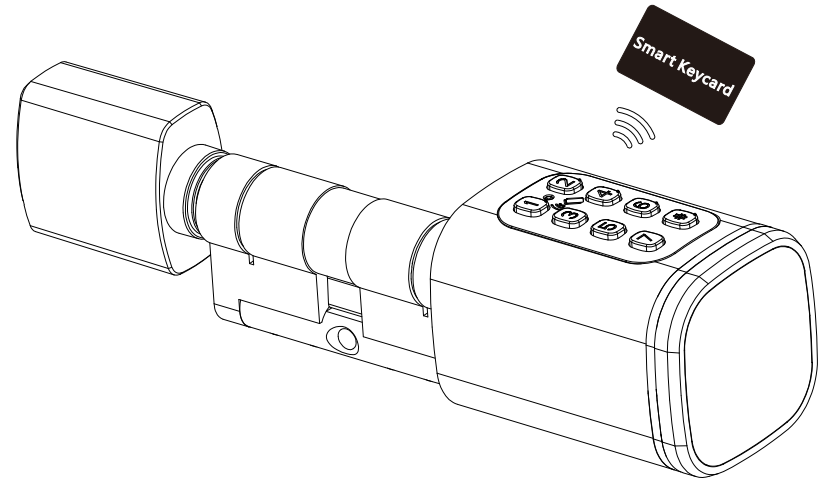

⚠ Attention

 Notice the keycard or passcode can only be enrolled by the TTLOCK APP, so it is important to install this app in your mobile before start daily use.

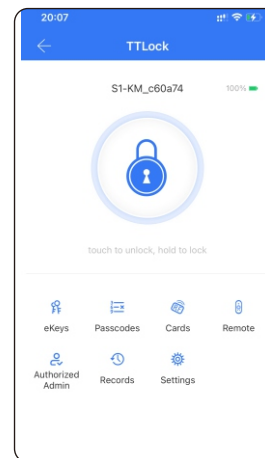


6 TTLOCK APP Settings


Please download the TTLOCK on Apple store or Google play. also you can scan the QR code below to download the APP directly.



 
6.1 Please register one account with your E-mail or mobile number.

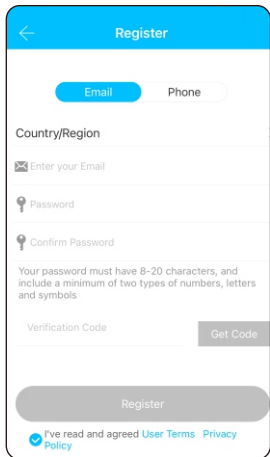

6.1.1 Sign up and Register with mobile or Email

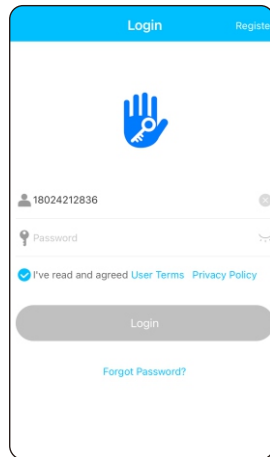

 
6.1.2 Enter mobile or mail Login with right password

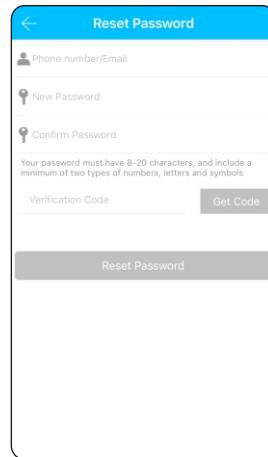


6.1.3 You can reset your password

6.2 Configure the Lock

 
Please run the TTLOCK APP and click "Add LOCK" on the left side of system setting and follow th steps to configure the lock with APP:

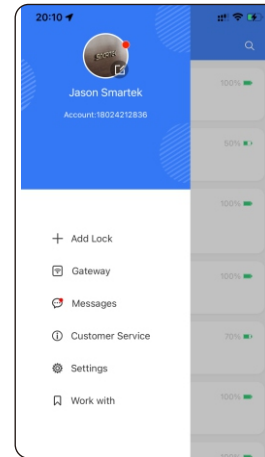

 Step 1
Add Lock

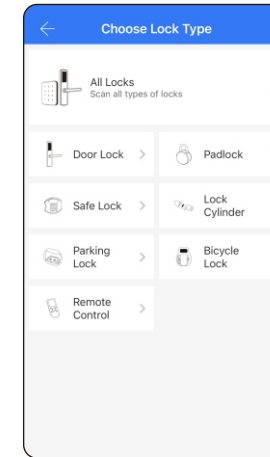

 
Step 2
Click "All Locks"

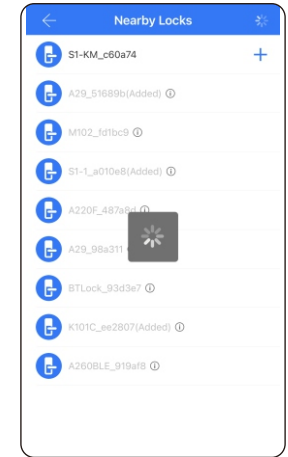

Step 3
Press+
Choose First Lock



 
Step 4
Add Lock Successfully
Rename the lock

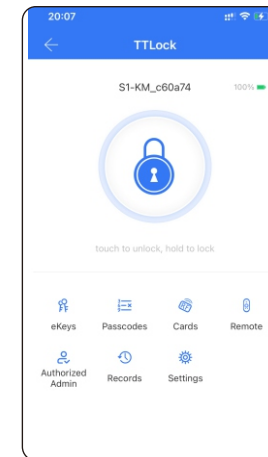


Step 5
Done

6.3 Function Description

 Under lock settings, you can see the features for the smart locks, such as eKeys /IC card/Passcode/Remote Unlock unlock records and settings etc.

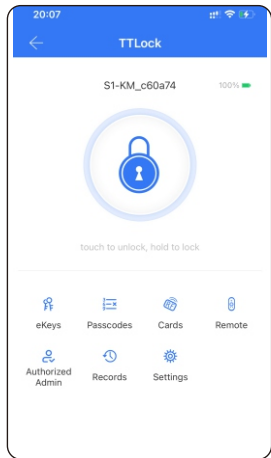


 There are many special features under the TTLOCK APP settings. you can make the setting according to your daily requirement.

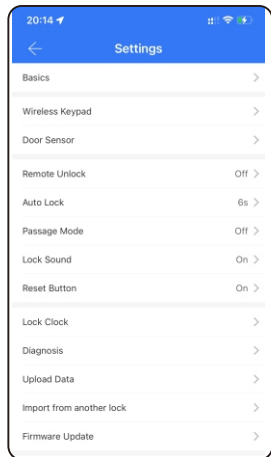


6.4 Enroll User Passcode


Under the lock setting, you can click the passcodes and generate different type passcode. There is permanent/timed and recurring passcodes for different condition.

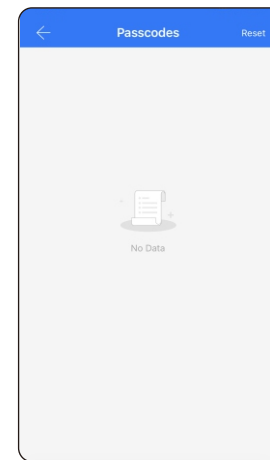

 Step 1
Add Passcodes

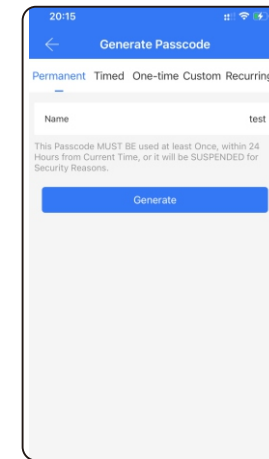


Step 2
Choose Permanent Type
Click Generate

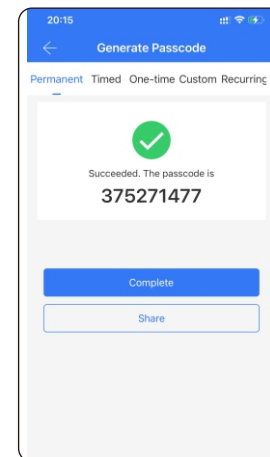


Step 3
Complete or share the passcode
via mail or message

6.5 Enroll User Card


Under the lock setting, you can click the option "Cards" and enroll the IC card. There is permanent /timed and recurring card under for different condition.

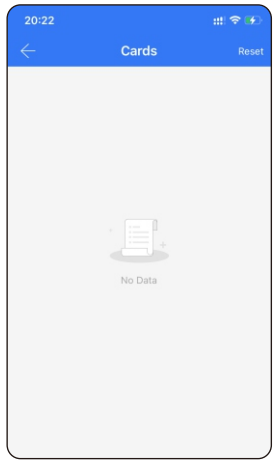

 
Step 1
Add Card

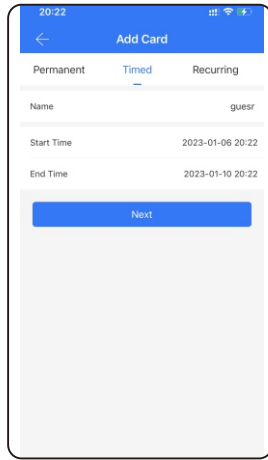

Step 2
Choose Timed Type

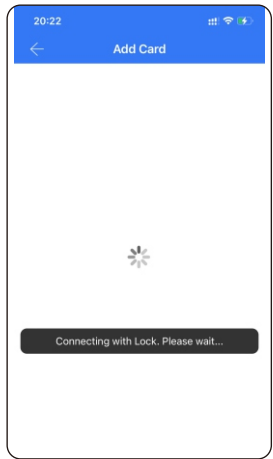

 
Step 3
Touch IC Card to the lock induction area

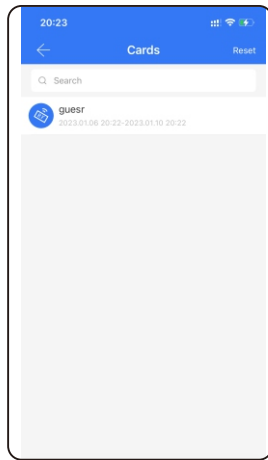


Step 4
Done

6.6 Enroll eKeys


Under the lock setting, you can click the option "eKeys" and enroll the eKeys for other users. There is permanent /timed and recurring eKeys for different condition.

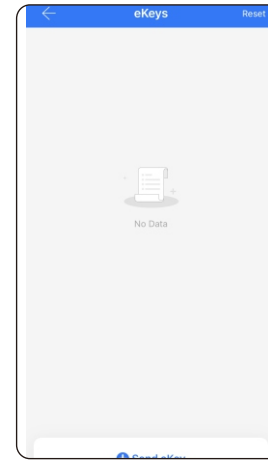

 Step 1
Send eKey

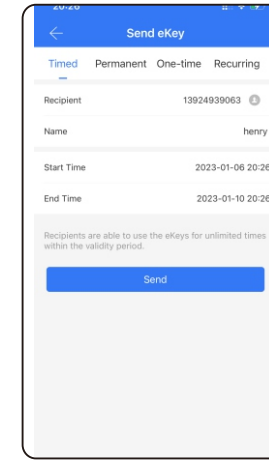


 
Step 2
Choose Timed Type

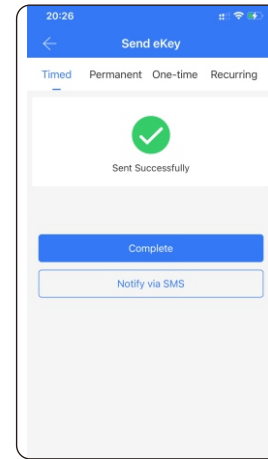

Step 3
Complete, you can share with SMS to recipient



6.7 Passage Mode

  Under the lock setting, you can tick "Passage Mode", under this setting the lock will be in always open state, you can disable the passage mode in the APP too.

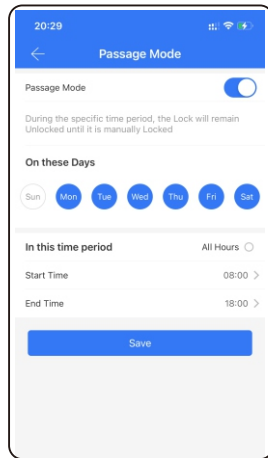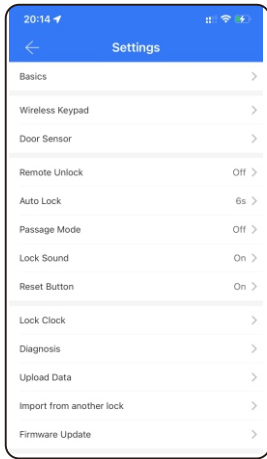

7. Reset the Lock

  Under the lock setting, you can click the "Delete" button and enter the admin password to reset the lock and the lock will be set to factory state, you can use default passcode 123456# to unlock the lock.

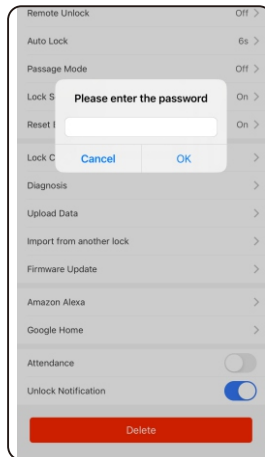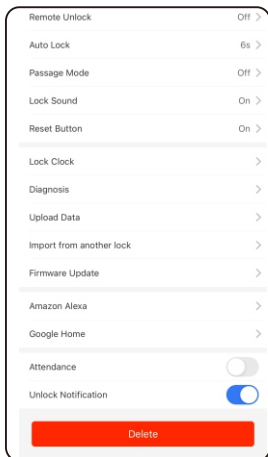

8. Remote Unlock Function (with Gateway)

The Wi-Fi gateway is a must to enable the remote unlock function, please refer the parameters below:

Model: **G2**
 Dimension: 70x70x26mm
 Network: Wi-Fi 2.4G
 IEEE Standard: 802.11b/g/n
 Power Interface: Type C USB
 Power Input: DC5v/500mA

Light Status



- When the gateway is power on:
- Light flashes alternately with red and blue;
- Stand by mode, ready for connection.
- Blue light: working mode
- Red light: network failure


 
8.1 Pair the Gateway with APP

1. Activate the App on mobile
2. Press the button "≡"
3. Select the [Gateway]
4. Select [G2]
5. Plug the gateway and power on it, when the light flashes alternately with red and blue
6. Press the "+"
7. Add Gateway
8. Select WiFi and enter password
9. Finish pairing gateway

⚠ Notice: If times out, please power on the gateway and try it again.

8.2 Remote Unlock

Under the lock setting, you shall first turn on the remote unlock function as the below photo. then you can click the unlock sign near the round circle, there is one tip for remote unlock, you can click it and unlock the door remotely.

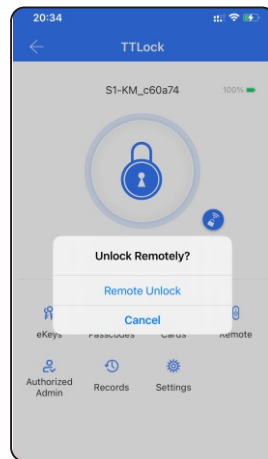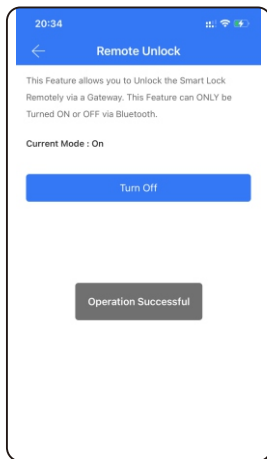

*ul. Jana III
Sobieskiego 80B
62-030 Luboń,
Polska*

tel. 61 307 22 35

*email:
biuro@wano.pl*

www.wano.pl